



Instructions: MAG-3001 Chipper/Shredder Blade Vice



CAUTION - Beware of sharp edges on blades, wear protective gloves.

The MAG-3001 is designed to hold chipper/shredder blades to make it easier to hold the blade while sharpening in a MAG-8000 or MAG-9000 lawn mower blade sharpener.

1. Remove any burrs from the underside of the blade, the underside of the blade must be flat to slide on the sharpener worktable.
2. Place the chipper/shredder blade on a table, bench, or flat surface.
3. Open the jaws of the MAG-3001, and place it over the chipper/shredder blade.
4. Tighten the 3/4" nut using a 1-1/8" wrench to clamp the chipper shredder blade in place (shown below)
5. Sharpen with the same method as a lawn mower blade (see MAG-8000 / MAG-9000 instructions for details).

