




PARTS DIAGRAM FOR: MAG-12008 Series Cleaner

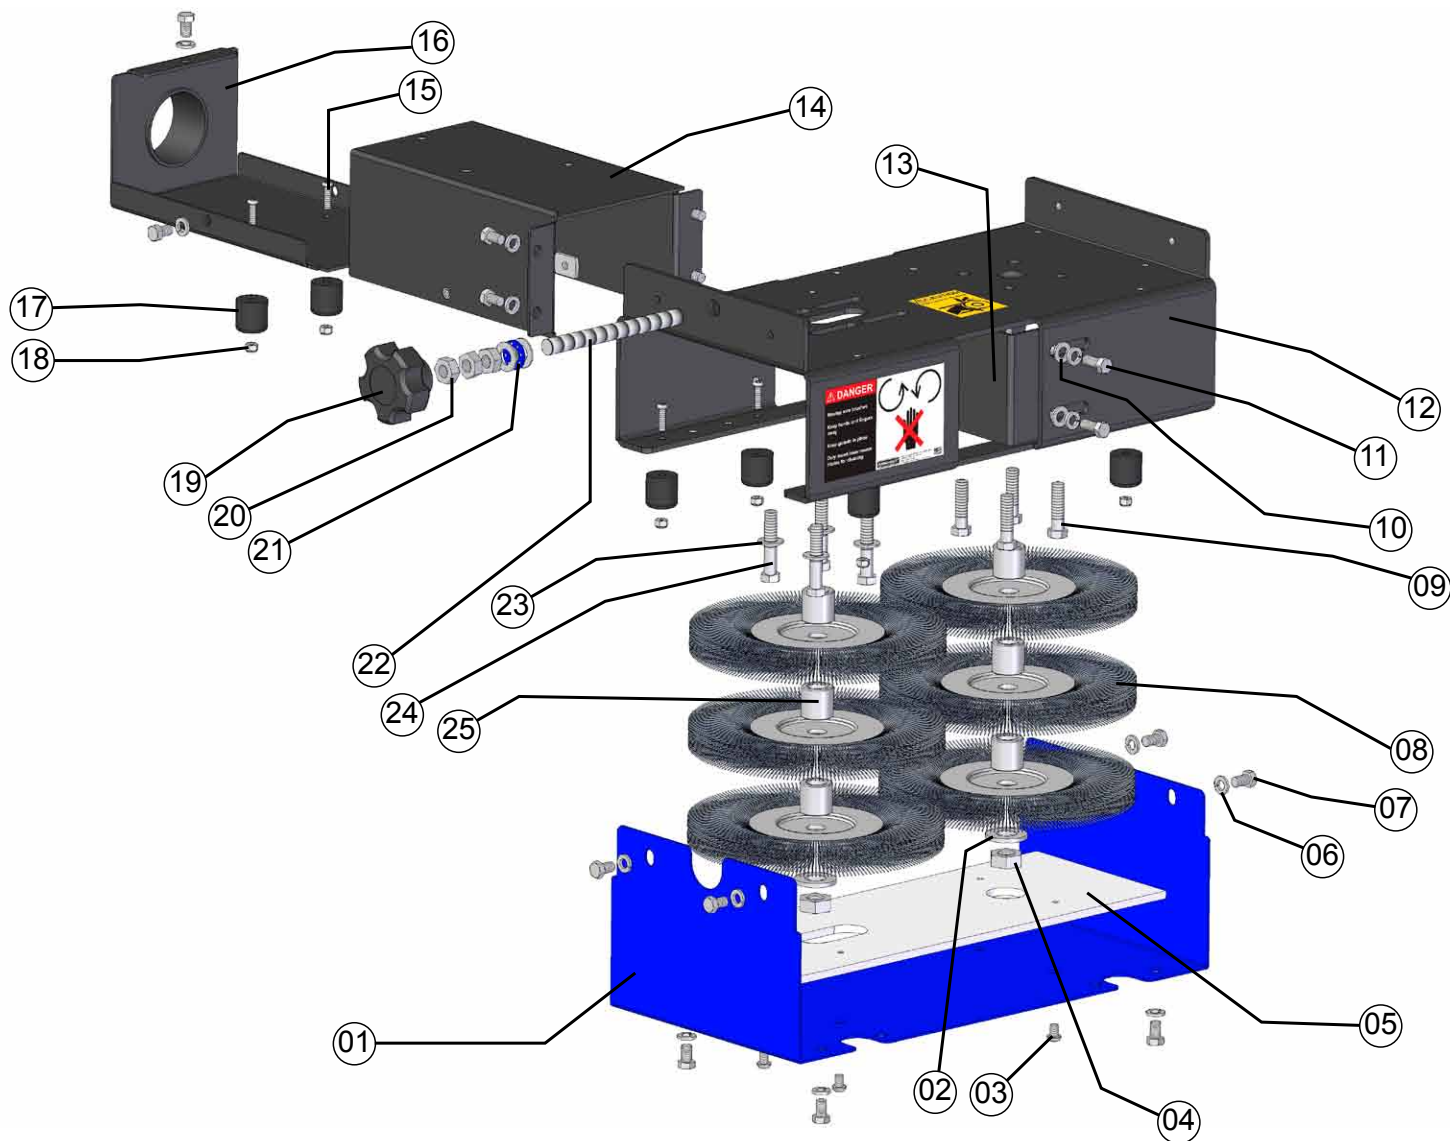

PARTS DIAGRAM FOR: MAG-12008 Series Cleaner

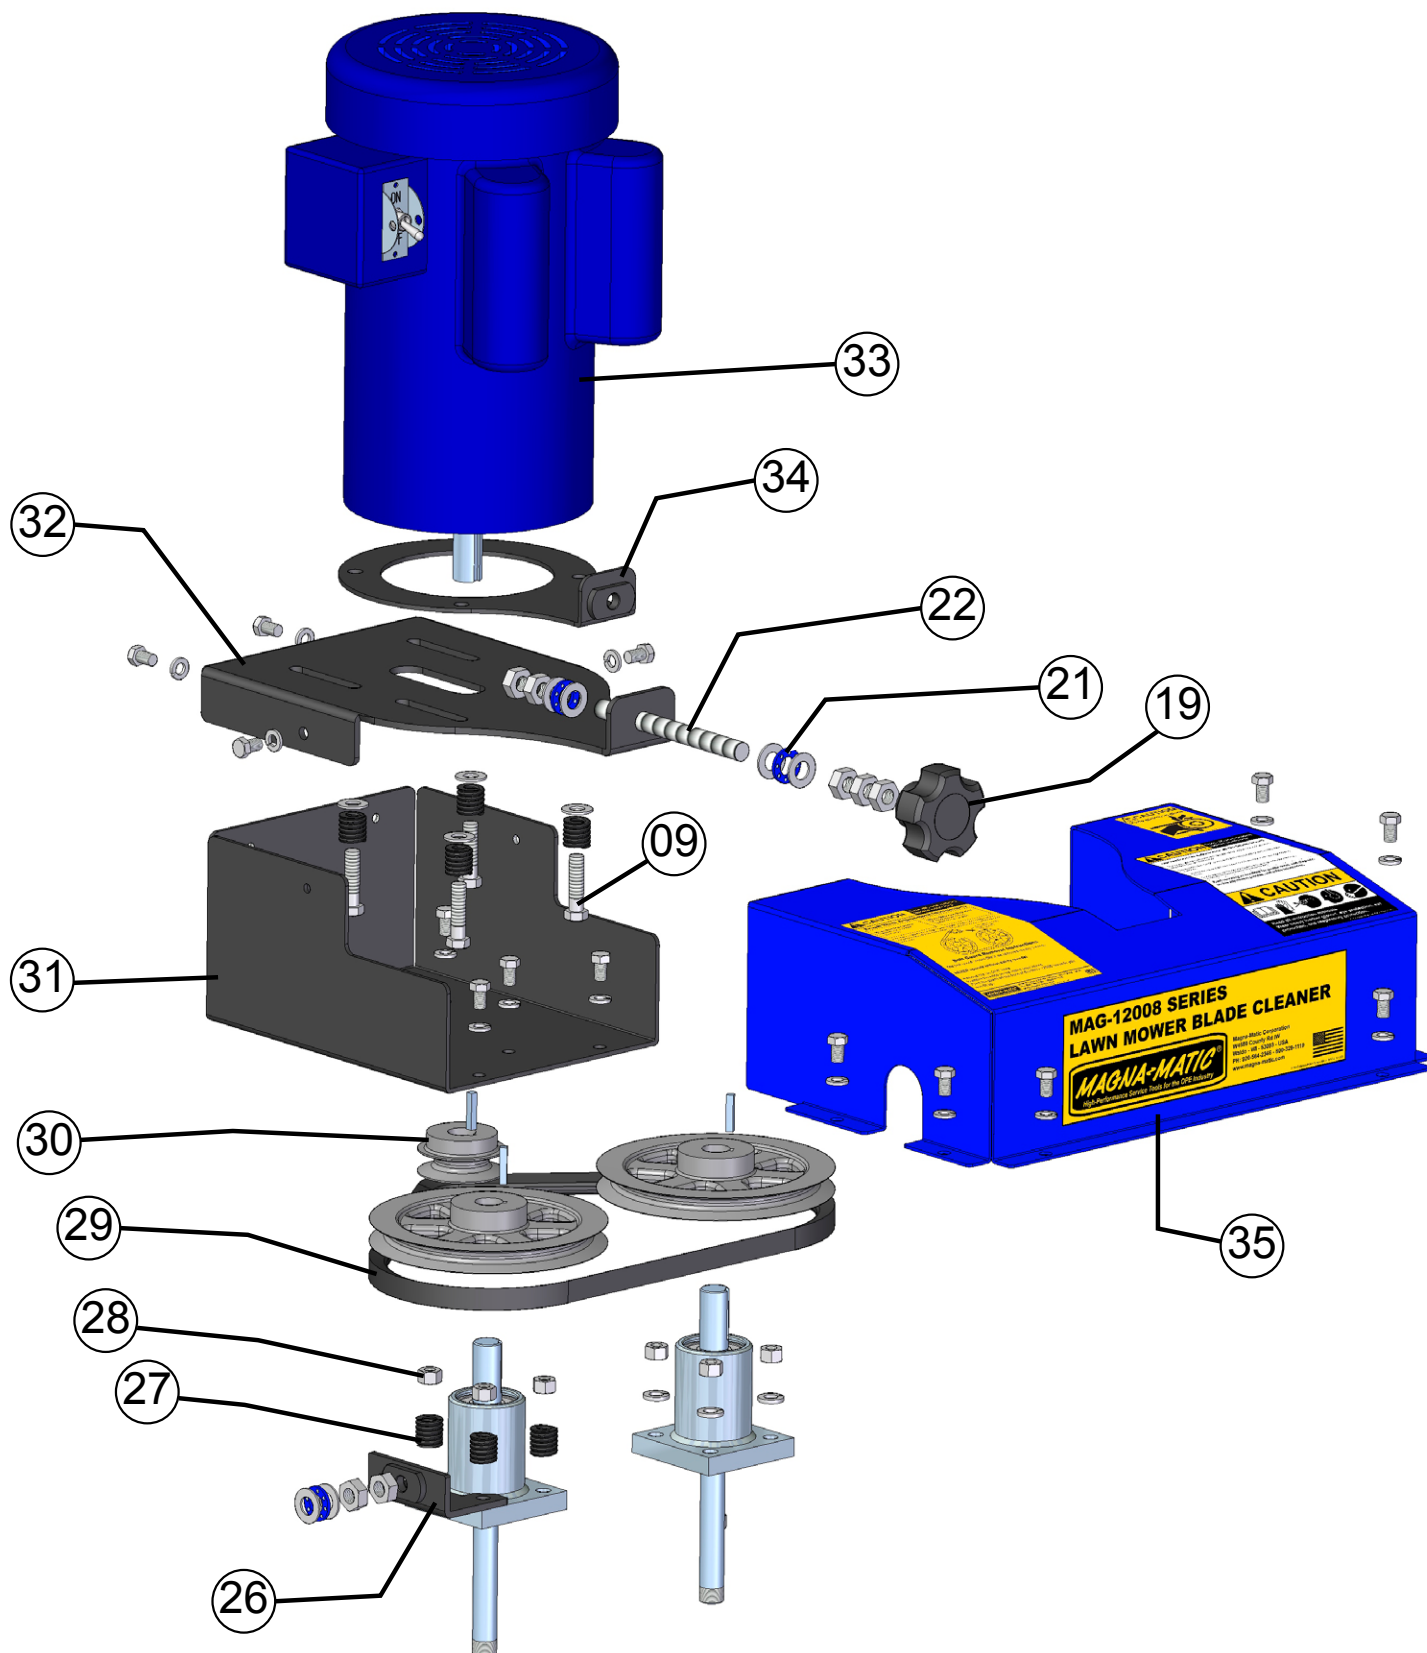

PARTS DIAGRAM FOR: MAG-12008 Series Cleaner

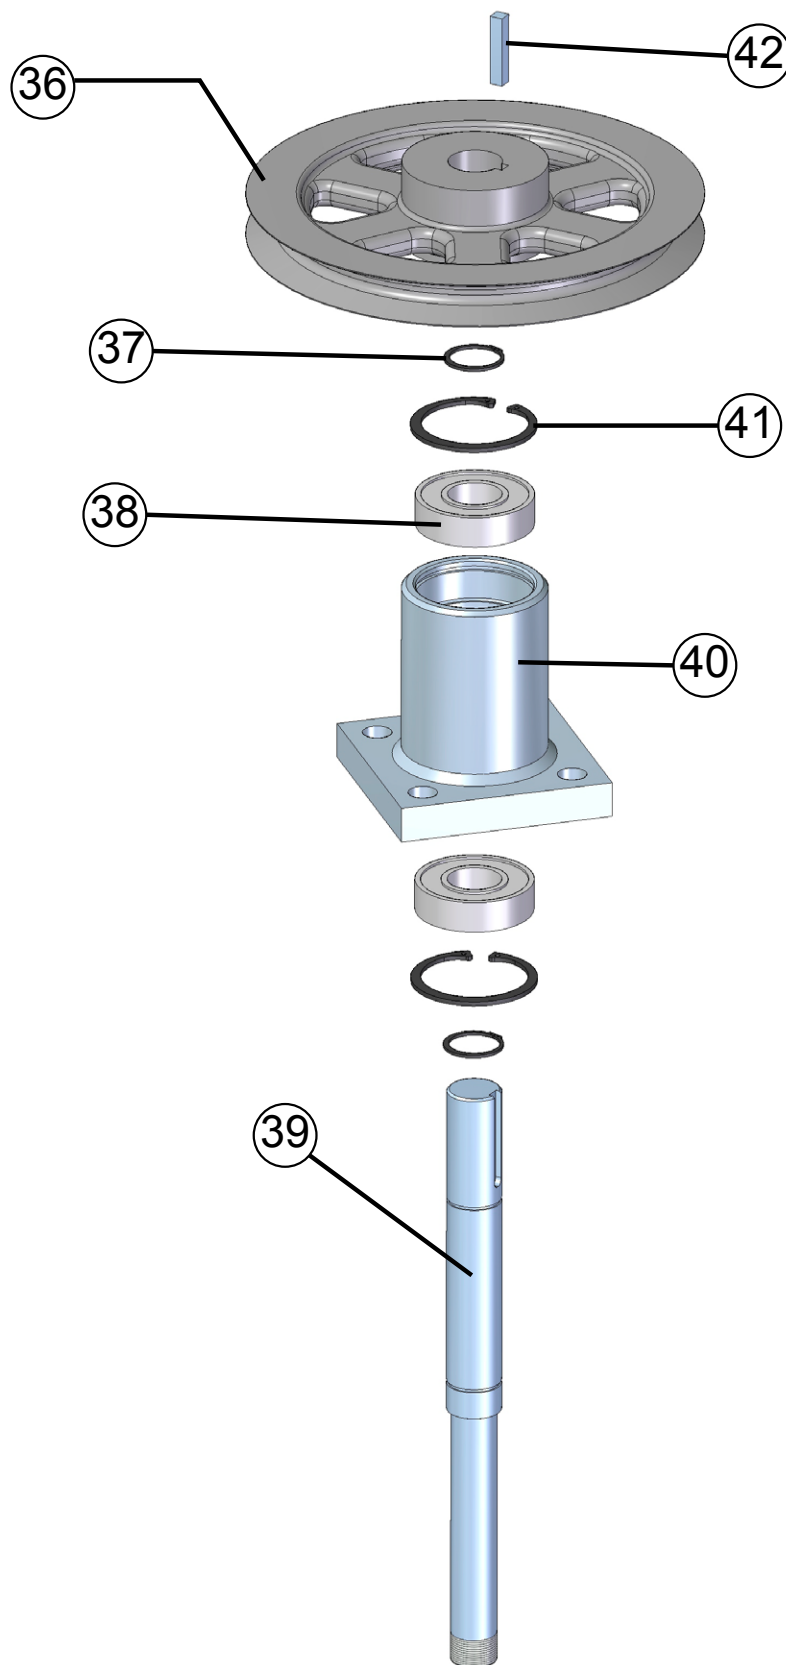



PARTS DIAGRAM FOR:

MAG-12008 Series Cleaner

MAG-12008 Lower Parts Key

Key #	Part #	Description
01	12008-07	Brush cover (machine base cover)
02	H-625WFZ	Brush washer 5/8" (2 req)
03	H-25C37BSSZ	1/4 button head screw 3/8" long (4 req)
04	H-625FLJNZ	5/8" left-hand jam nut (2 req)
05	12008-26	plastic wear pad
06	H-31WLZ	5/16" lock washer (32 req)
07	H-31C500HSZ	5/16" bolt 1/2" long (30 req)
08	12008-20	Brush (6 req)
09	H-37C150HSZ	3/8" bolt 1.5" long (8 req)
10	H-31WFZ	5/16" flat washer (2 req)
11	H-31C75HSZ	5/16" bolt 3/4" long (2 req)
12	12008-08	Main body
13	12008-06	Work table / brush safety guard
14	12008-04	Exhaust top box
15	H-18C75BSSss	10-24 screw 3/4" long (8 req)
16	12008-05	Exhaust bottom box
17	9000-11	Rubber bumper (foot) (8 req)
18	H-18CNINFZ	10-24 nylon insert nut (8 req)
19	12008-32	Knob 1/2" insert (2 req)
20	H-50CNFZ	1/2" nut (10 req)
21	12008-33	1/2" thrust bearing (4 req)
22	12008-27	Brush adjustment rod (2 req)
23	H-37WFZ	3/8" flat washer (8 req)
24	H-37C200HSZ	3/8" bolt 2" long (4 req)
25	12008-11	Brush spacer bushing

MAG-12008 Upper Parts Key

Key #	Part #	Description
26	12008-09	Bearing block adjustment plate
27	12008-24	Die spring (8 req)
28	H-37CNFZ	3/8" nut (8 req)
29	12008-16	Cogged V-belt
30	12008-18	Motor pulley
31	12008-03	Motor box bottom
32	12008-02	Motor box top
33	12008-25	1.5 HP Motor
34	12008-01	Motor slider bracket
35	12008-10	Pulley guard/cover

MAG-12008 Spindle Parts Key

Key #	Part #	Description
36	12008-19	Brush pulley (2 req)
37	12008-21	External retaining ring (4 req)
38	12008-17	Bearing (4 req)
39	12008-12	Drive shaft (2 req)
40	12008-13	Bearing block (2 req)
41	12008-22	Internal retaining ring (4 req)
42	H-187KEY	3/16" keyway square (3 req)